

May 2014


CFX-750 Display: Upgrading Firmware and Component Firmware

This document describes the procedure used to upgrade display and component firmware on the Trimble® CFX-750™ display.

You must first save firmware to a USB drive before you can upgrade the firmware on the display.

Saving firmware to a USB drive

1. Save or transfer the required firmware file/version to the root file of a clean USB drive, so that the firmware file is not inserted into an existing folder:

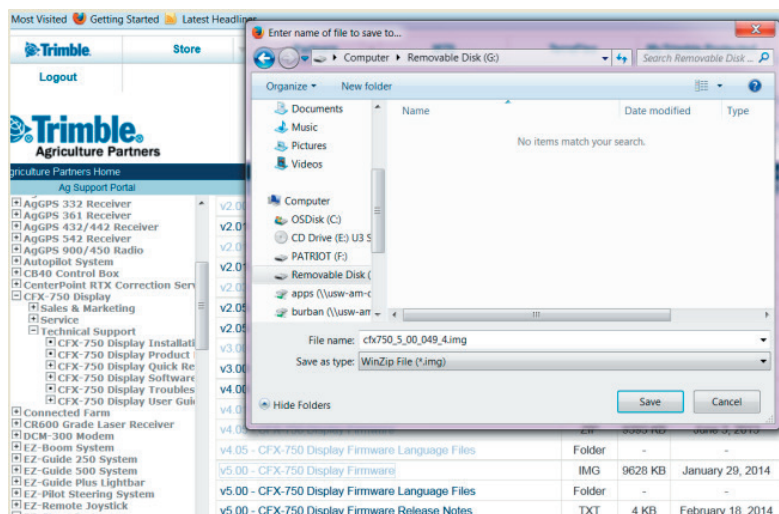


This document is for informational purposes only and is not a legally binding agreement or offer. Trimble makes no warranties and assumes no obligations or liabilities hereunder.

Trimble Navigation Limited, Agriculture Business Area, 10368 Westmoor Drive, Westminster, CO 80021, USA

© 2014, Trimble Navigation Limited. All rights reserved. Trimble and the Globe & Triangle logo are trademarks of Trimble Navigation Limited, registered in the United States and in other countries. Field-IQ is a trademark of Trimble Navigation Limited. All other trademarks are the property of their respective owners. 32275



2. Verify that your file was loaded to the USB drive:

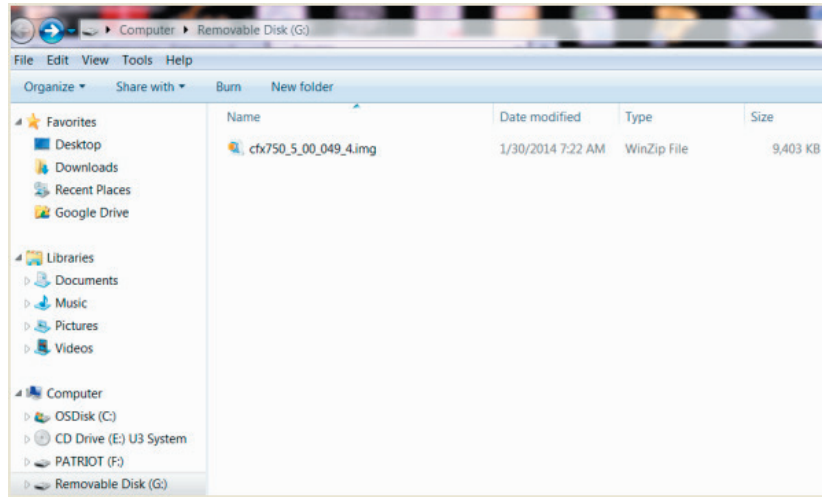

3. Safely eject and then remove the USB drive from your computer.

Upgrading the display


1. Make sure that the display is connected to a GPS antenna and has GPS signal before attempting the firmware upgrade. The firmware upgrade may not complete on the display or components if a GPS signal is not available.
2. Insert the USB drive into the back of the CFX 750 display.

Note: When you upgrade firmware to a higher version, a **Firmware Upgrade Availability** message may appear automatically when you insert the USB drive. If it does, continue to Step 8 of this section.


3. Verify that the USB drive icon in the upper right hand corner of the screen appears and is green, indicating that it is ready for use.
4. Once the icon appears and is green, tap **Settings**:




5. In the *Settings* screen, tap **System**:

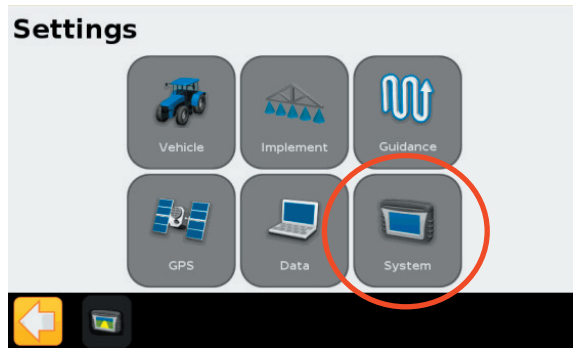

6. In the *System* screen, tap **Unlock/Upgrade**:

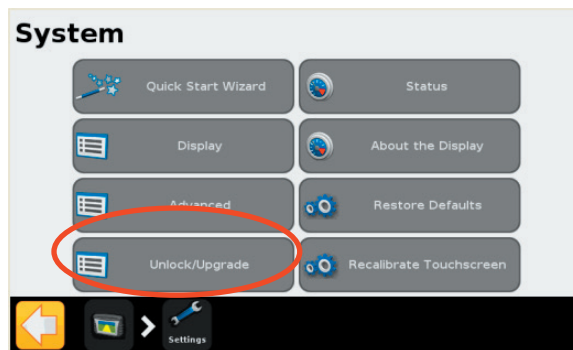

7. Tap **Firmware Upgrade Wizard**:

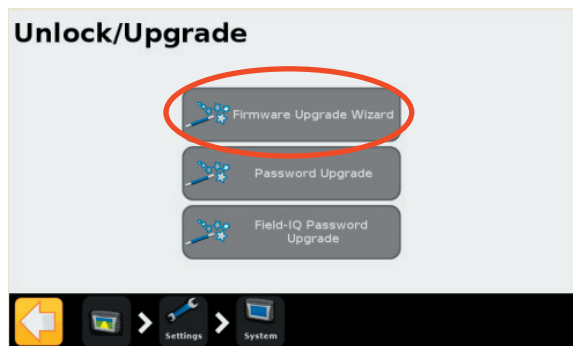

Note: If this option is not available, remove the USB drive from the display, reinsert it and then verify that the correct firmware was installed on the root file of the USB drive. In some cases, for example, when attempting to upgrade the Field-IQ™ firmware, the **Firmware Upgrade Wizard** option may not appear until the implement is configured and Field-IQ is selected as the connected controller.

8. A message appears that a firmware upgrade is available. Tap  to continue:



9. In some cases, multiple firmware files may appear on screen. Select the firmware to be loaded to the display or component and then tap .



10. Confirm that the items that appear in the *Please Confirm* screen have been checked before initializing and completing the firmware upgrade process and then tap . If one or more of the items on the confirmation page have not yet been completed yet, click  to exit the wizard:



11. Once the display or component upgrade has completed, navigate to the *System Status* screen to verify that the update has taken place and the component is on the correct version:

System Status		?
Time	6:40:41 p.m.	▲
Date	02/26/2014	
ID	CFX-750	
Version	5.00.049.4-[11.00]	
Version Date	01/29/2014	
Serial Number	5043504565	
Part Number	94110-00	
Hardware Revision	D	
System Voltage	14.9 V	
Temperature	95.7 °F	▼
		✓

For more information

CFX-750 Display User Guide, Version 5.0, page 238

Go to <http://agpartners.trimble.com>.